

- For safety concerns, use parts such as: thermal insulation sleeve. earth clamp, appropriate power cord.
- For the first time using, TS100 may generate a light smoke due to the heating of heating elements, which is a normal phenomenon.
- After continuous use up to 40 minutes, the handle surface. temperature will reach 50°C~60°C
- While TS100 is heating, DO NOT touch the metallic parts near the tip and DO NOT remove/replace the tip.


## Specifications

Preset temperature Power saving temperature		300°C(Initial setup) 200°C(Initial setup)
12V	17W	40s
16V	30W	20s
19V	40W	15s
24V	65W	11s

## Firmware Upgrade

- 1. Visit www.miniware.com.cn and download the latest TS100 firmware to your PC.
- 2.Connect TS100 to your PC with USB data cord. meanwhile, press TS100's Button A to enter DFU mode once a "DFU1.0" notice appears on the screen. A virtual disk with 8 serial numbers will appear on your PC.
- 3. Copy the hex firmware to the root directory of that disk. When the extension of the firmware changes from "hex" to "rdy", disconnect USB and the firmware is upgraded.



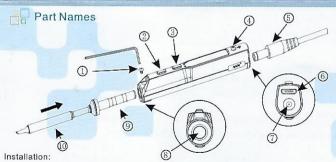

- 1. The tip setscrew
- 2. Button A
- 3 Button B
- 4. The ground wire setscrew
- 5. Power connector
- 6 Mirco USB
- 7.DC5525 12-24V port
- 8. Soldering tip port
- 9. Soldering tip connector
- 10. Soldering tip heating end
- 1. Loosen the tip setscrew, insert the soldering tip connector and tighten the screw;
- 2. Connect the ground wire to the ground wire setscrew;
- 3. Connect the DC connector to TS100, connect the power cord and turn on the power accordingly.