

1/10 & 1/12 PAN CAR SET-UP SYSTEM




HUDY proudly introduces the first universal set-up system for 1/10 and 1/12 Pan Cars. Due to the smart adapter exchange system with two axle positions, the set-up system can be used for both 1/10 and 1/12 pan cars; it is very quick and easy to switch between the two different axle positions. HUDY differs from nearly all other companies that offer pan car set-up systems that use different front bearings for outrives; HUDY developed adapters that fits most popular pan cars on the market. The HUDY Pan Car Set-up System is used only on front suspension because the rear suspension is fixed and non-adjustable.


The set-up system consists of the following pieces:

- alloy side plates (2)
- alloy camber gauges (2)
- acrylic toe gauge (1)
- alu nut for camber gauges (2)
- alu adapters for axles (2)

1. ATTACH A CAMBER GAUGE TO A SIDE PLATE USING AN ALU NUT.

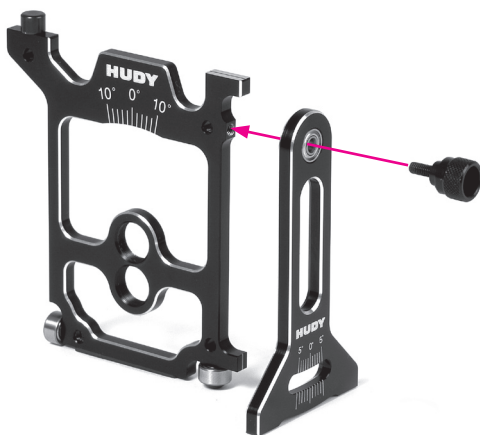


2. SCREW AN ADAPTER FOR OUTDRIVES TO A SIDE PLAY.

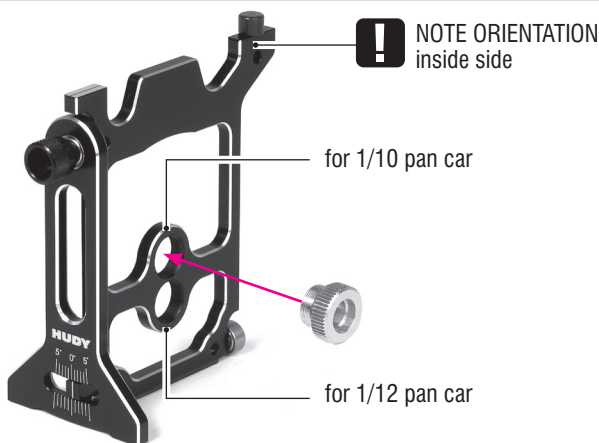

The bottom hole is for 1/12 pan cars, while the upper hole is for 1/10 pan cars. The adapter goes on the inside side of the side plate, and works as a replacement for the wheel. Therefore it is important to put it on the proper side of the side plate to keep the same width of the car.

3. INSERT THE FRONT WHEEL BEARINGS INTO OPPOSITE SIDES OF THE ADAPTER.

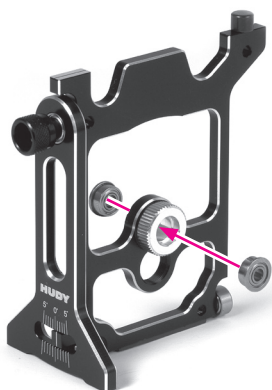


4. SLIDE A FRONT AXLE THROUGH THE FRONT WHEEL BEARINGS IN THE ADAPTER.

Remember that the adapter goes towards the car.


5. THREAD THE WHEEL NUT ONTO THE FRONT AXLE TO REMOVE PLAY. YOU CAN NOW START MEASURING CAMBER AND TOE IN/OUT.

Measuring the camber and toe on a 1/12 Pan Car. (Lower adapter position is used.)

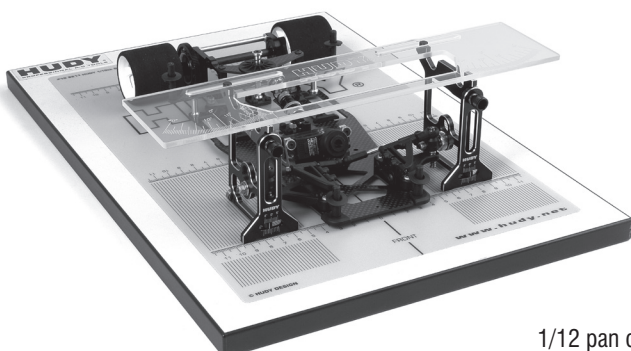

1/12 pan car

Measuring the camber and toe on a 1/10 Pan Car. (Upper adapter position is used.)

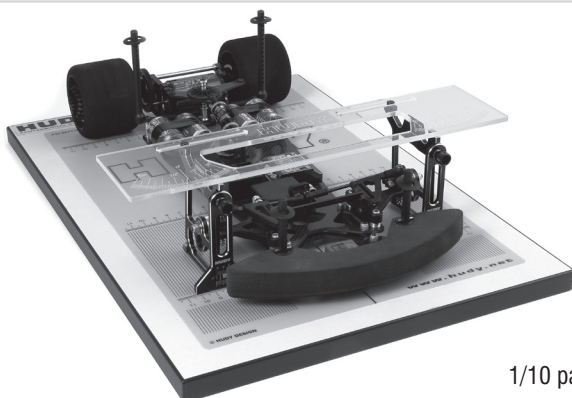

1/10 pan car

You can find all other information in the Set-up Book. The Set-up Book gives important information on adjusting the car and the effects on performance. For the best and comfortable set-up adjustment, these items are highly recommended:

- #108201 Flat Set-up Board for 1/10 Touring Cars
- #108211 Plastic Set-up Board Decal for 1/10
- #181030 HUDY Spring Steel Turnbuckle Wrench 3 mm
- #107718 Ride Height Gauge for 1/10 & 1/12 Pan Cars - Stepped